

We would like to congratulate you on the purchase of your Avido 'Proton Bluetooth Speaker. We hope you enjoy this Avido product as much as we do. Please read this manual carefully before use. Enjoy!

Included

Avido "Proton Bluetooth speaker, Charging & Audio Cable, and the user guide.



User Guide



Power & Mode Selection

Toggle the switch to the "On" position. Press and hold "M" button I 3 seconds to switch modes. Modes include: Bluekooth, TF Card, Aux-in, FM Radio, Card reader, Recorder and Recorded Tracks Playback.

When powering on the speaker, the default mode will be Bluetooth A start-up tone will play, followed by the voice prompt "Bluetooth Mode".

- Bluetooth Pairing

Power on the Avido speaker. Pairing mode is automatically enabled On your Bluetooth device, find "Avido Speaker" under your Bluetooth Settings". (Input "0000" if a password is required) A succasful connection via Bluetooth will be followed by an audible notification.

Tor help with Diselecth Settings, classe consult your device's user manual.

Bluetooth Speaker Phone Call

The speaker phone function is enabled when your device is connected via Bluetoth. Peas the ~ button to answer a col. Press again to and the cal. To decline a cal without answering, press and hold the ~ button for 3 seconds. For the best conversation experience, turn the speaker so that the mic opening faces the user and keep the talking distance to the speaker within a short distance.

• TF card play

Enter the "TF Card" mode by holding the "M" button for 3 seconds A volce prompt "TF Card" will be heard when entered. Press "<" or ">" to skip songs, press HI to pause playing.

Audlary Mode

Enter the "AUX" mode by holding the "M" button for 3 seconds. A voice prompt, "Auxiliary Connection" will be heard when entered. Connect the speaker to peripheral devices with the included AUX-USB cable to play music.

• FM Radio

Enter the FM radio mode by holding the "M" button for 3 seconds. A voice prompt." FM Radio" will be heard when entered, Press the ≠1 button to automatically search and store charmels. Please allow the dorloa of kow moments to scan available stations. Press "<" or ">" to skip the channels. le: Reception will vary dependent on numerous terrestrial conditions.

Card Reader
 Insert a Tif-card into the speaker. Connect the speaker to a computer with the included USB cable. Enter Card Reader mode on the speaker by holding the "It" button for 3 seconds. Wall for the computer system to detect the external storage plugh. A storage plotes shot diagraps device shot diagraps device shot diagraps device shot diagraps device shot diagraps.

* Neocure*

Enter the "Recorder" mode by hobling the "M" button for 3 second Prass the ## button for road. A ble indicator light will stay it during the recording. Persis the ## button again to first in recording.

ATE card (Micro SD card) is required to save recordings.

Please onesse a TE card is inserted in the separate refere recording. Recording at the part of the properties of the

Light Modes

Switch on the device, press and hold the # button to turn on the light effect. There are 4 modes available. Press the # button to switch modes. Press and hold the # button to turn off the light.

- switch modes, Press and note the 9 colours out on or the start.

 Noded 1. The white LEB light in the speaker will be lift.

 Node 2. The white light in the speaker will be lift in the main LEB lights will show you sharply variables nodes.

 Node 3. Rhythm binking light effect: Lights will blink according to the intensity of the playing must be not the sharply must be sharply with the sharply sharp

Using the Micro-USB Cable, connect the Micro-USB connectior to the speaker, and the Standard USB connector to a USB Power Source, such as a laptop computer or smartphone USB charger. An illuminated red light indicates charging and turns off when charging is complete.

Operation • REC play

• REC play
Please ensure a TF card with a saved recording is inserted into the
TF card slpt. Then enter "REC play" mode by holding the "M
button for 3 seconds. Voice prompt "Recorded Tracks Playback"
will be heard when entered. The recordings in the card will be
played. Press "<" or ">" to skip songs. press ▶■ to pause playing.

- Press button M / HI / ~:
 (1) Play/Pause (In Bluetooth & TF Card modes)
 (2) Answer call (In Bluetooh mode)

- (2) Answer can in bluecon maker
 Press again to hang up
 (3) Auto search channel lin FM radio mode)
 (4) Record (in Recorder mode)
 Press again to finish recording
 Press and hold button M/ FII /~
 (1) Call Decline lin Bluetooth mode)
 (2) Switch between modes

- (2) Switch between modes

 Press button </ -- : Previous;

 Press button +/ > : Next;

 Press and hold button </ -- : Volume-;

 Press and hold button +/ > : Volume-;

 Press and hold button # : Light mode button;

 Press and hold button # : Turn on/off light.

Output power 2.5 W (6V input)
-MP3, WAV, WMA, APE, FLAC
-Impedance 40
-Flack
-F

In Bluetooth Mode: (1) Flashing Quickly: Discovering Bluetooth device; (2) On: Bluetooth connected; (3) Off; Not in bluetooth mode;

Red indicator light status
 (1) On: charging: (2) Off: charge completed;
 Beeping tone
 (1) Low battery warning

Blue Indicator Light Status
In Bluetooth Mode:

(1) Blue light on during recording;

Specifications

Avido warrants this product to be free from defects in materials and workmanship for 90-days. If your Avido accessory is found to be defects within that time frame, we will promotly repair or repaire. It his warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. If you are in need of warranty support, please email info@andepower.com.

